


P/N 291-3007 has been superseded by 288-1069

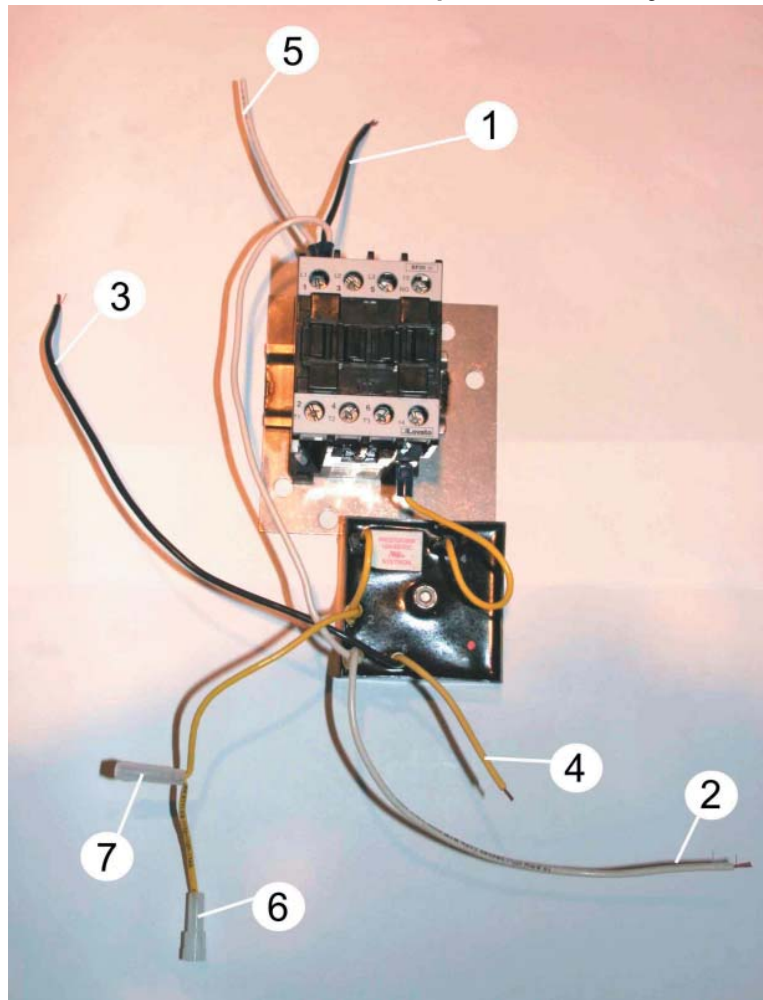

INSTALLATION INSTRUCTIONS: TO BE PERFORMED BY A QUALIFIED SERVICE TECHNICIAN

- #1 Shut-off power to the machine at main breaker panel. Then remove cover of Heater Relay power box.
- #2 Remove wires from existing Rinse heater relay, and remove relay from the power box.
- #3 Install new Rinse heater contactor kit using existing studs and locknuts.
- #4 Connect the two black wires #'s 1 and 3 to the two black wires on the indicator light using two of the butt connectors provided in the kit.
- #5 Connect the white wire #2 to the white wire coming from the Wash heater relay using another butt connector.
- #6 Connect the yellow wire #4 to the yellow wire coming from the thermostat with a butt connector.
- #7 Connect the white wire #5 to the white wire coming from the Control Box mounted on the top of the machine using another butt connector.
- #8 Find the yellow wire coming from the control box and going to the thermostat in the rinse tank. Separate it at the molex connector and plug connector #'s 6 and 7 into the appropriate male and female connectors.
- #9 Re-connect the three incoming power lines to terminals L1, L2, and L3 on the top of the contactor.
- #10 Re-connect the three heater power supply lines to terminals T1, T2, and T3 on the bottom of the contactor.
- #11 Verify that all connections in the heater wiring circuit are secure and tight.
- #12 Turn main power supply on at the main breaker box and check for proper heater operation. Replace cover of the heater relay power box.

NOTE: To dispose of the mercury relay, package the relay for shipment and contact American Dish Service for a return shipment call tag (800)-922-2178.